


USER MANUAL ZENIT



ZENIT are high efficiency luminaire with IP23 that can be used in different environments with a higher requirement example warehouse, industrial and stores etc.

MOUNTING INSTRUCTION


Zenit 1200

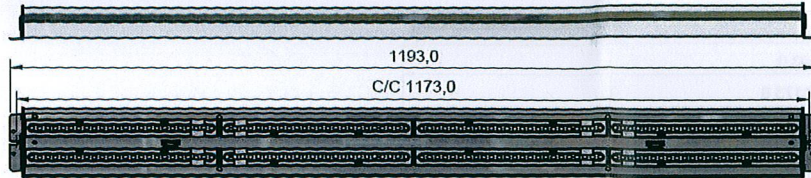


ZENIT L1500

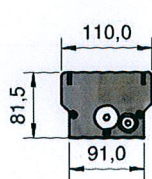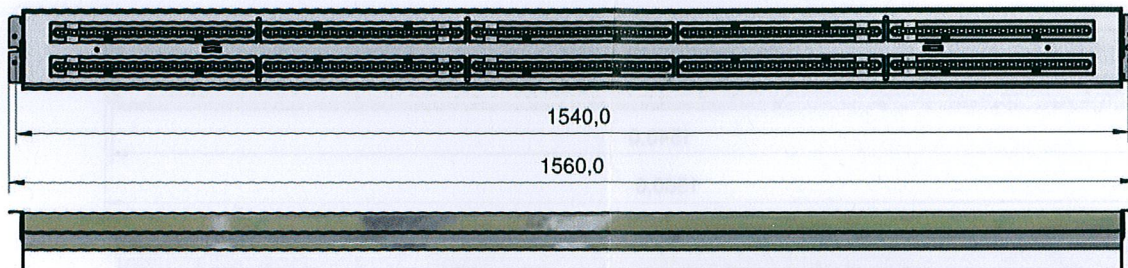





Zenit standard

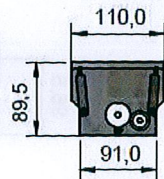

Zenit with diffuser

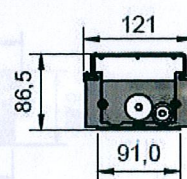



Zenit with grid

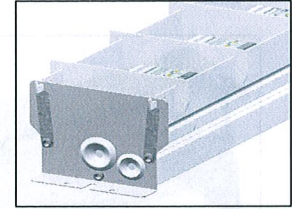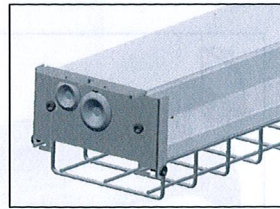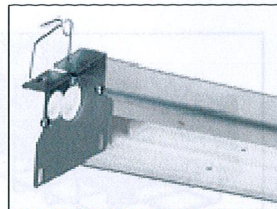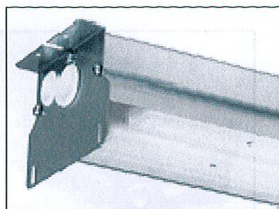

Install on ceiling through the holes in the gable end or on the tigtrope with an accessories.

WIRING

The standard luminaire are equipped with the 5 pin terminal block. For other installation, see below.

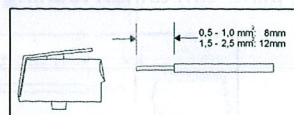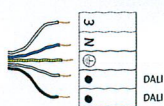

SERVICE

Disconnect the power supply before working with the fixture, label inside fixture show the light source to be used in exchange. If converter/driver needs to be change, be careful with the important parameters such as e.g. maximum power, constant current, voltage range and efficiency.

