



# INSTALLATION INSTRUCTIONS FOR KU 3/4P VV


## ASENNUSOHJEET KU 3/4P VV

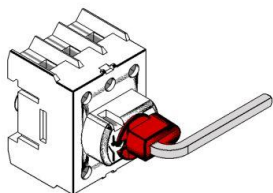

Turn the **KU xxN**-switch to OFF-position (O).  
Käännä **KU xxN** kytkimet O-asentoon.

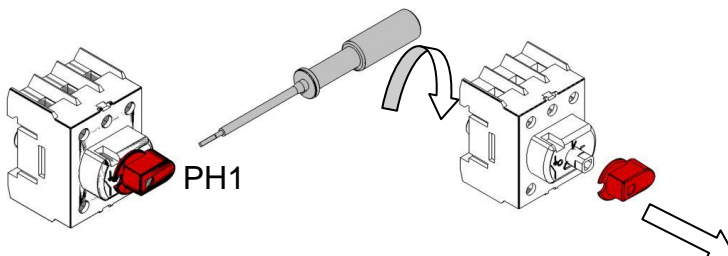


Remove possible position indicator.  
Poista mahdollinen asennonosoitin.

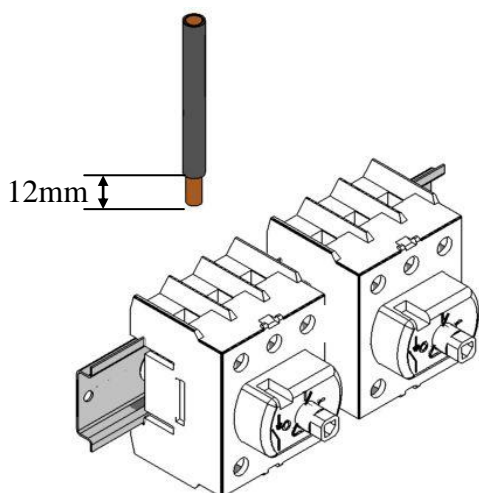

KU 16-40A T=1.8Nm (Pz2)  
KU 63-125A T=2.5Nm (Pz2)

Install the switches to din-rail and connect the wires to the terminals.  
Asenna kytkimet din-kiskoon ja kytke johtimet liittimiin.


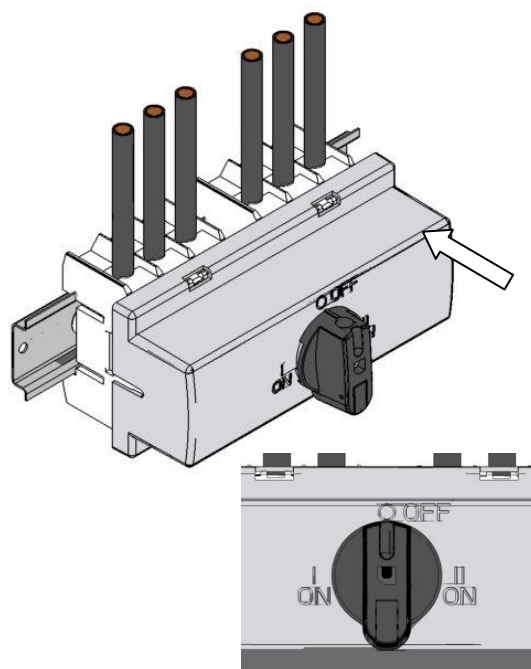


Push the change-over kit in OFF-position to the switches until snap-on grips are firmly clipped on.  
Paina vaihtovivusto O-asennossa kytkimiin kiinni kunnes snap-on kynnet ovat lukinneet vivuston kytkimiin kiinni.




# INSTALLATION INSTRUCTIONS FOR KU 3/4P VV

## ASENNUSOHJEET KU 3/4P VV

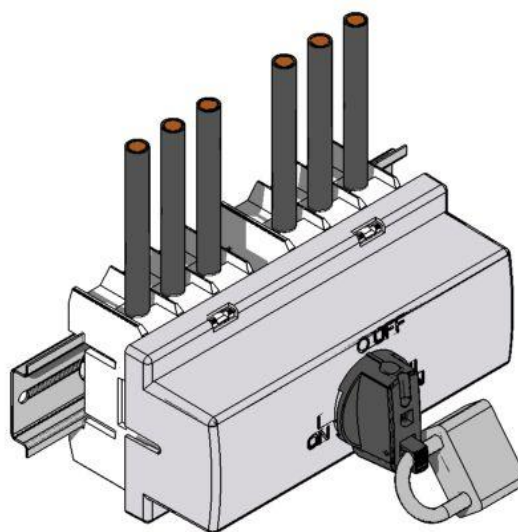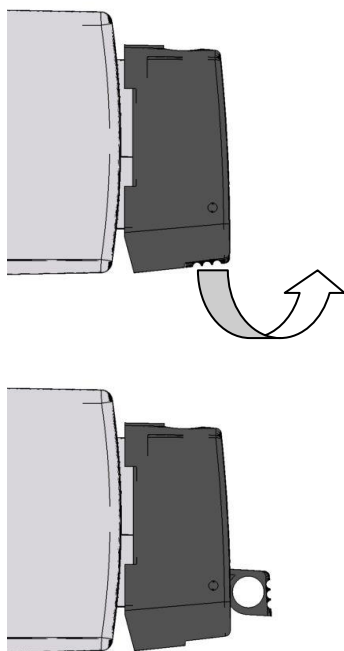


Padlocking in OFF-position.  
Lukitus O-asennossa

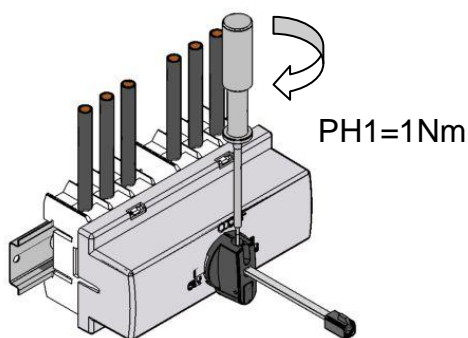

Door interlock handle and extended shaft options:

Väännin- ja akselivaihtoehdot:

- LK11 1-0-2, shaft (akseli) L=xx AD11/VT
- LK12 1-0-2, shaft (akseli) L=xx AD12/VT

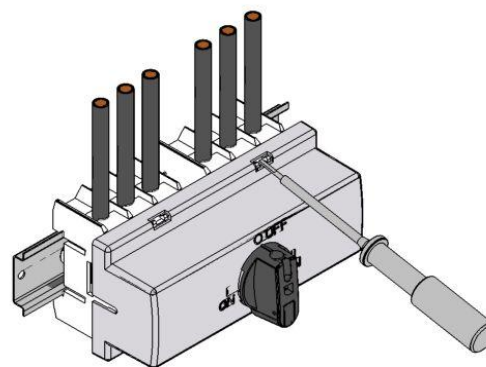

The change-over kit can be removed with a screwdriver.  
Vaihtovusto voidaan irroittaa ruuvitaltan avulla.

